

FUYL Tower

Charge your devices here

Type locker number
to lock/unlock

Identify an unused/
unlocked locker.

Select Locker
12 OK

Type selected locker and
press OK. Locker must be 1-15.

Locker is free: 12
PIN to reserve: ***

Enter a 4 digit PIN. If the locker is not
free, display will indicate LOCKED.

Locker is free: 12
Confirm PIN: ***

Confirm your PIN
to proceed further.

Insert items & push
firmly on door

Place mobile device/s in the locker
and connect to charging socket.

Locking...

Close the door firmly and
the door will latch and lock.

UNLOCKING: Select your locker by typing in locker number and
enter your PIN. The locker will unlock. Remove your devices.